

Installation Manual

**MITSUBISHI OUTLANDER 5DR
MIT-OUTL-5-A**



COMPONENTS INCLUDED

6



x 2



CL-M01 x 2

7



x 2



CL-M02 x 6

8



x 2




CL-M04 x 8



Installation

MITSUBISHI OUTLANDER 5DR



MIT-OUTL-5-A

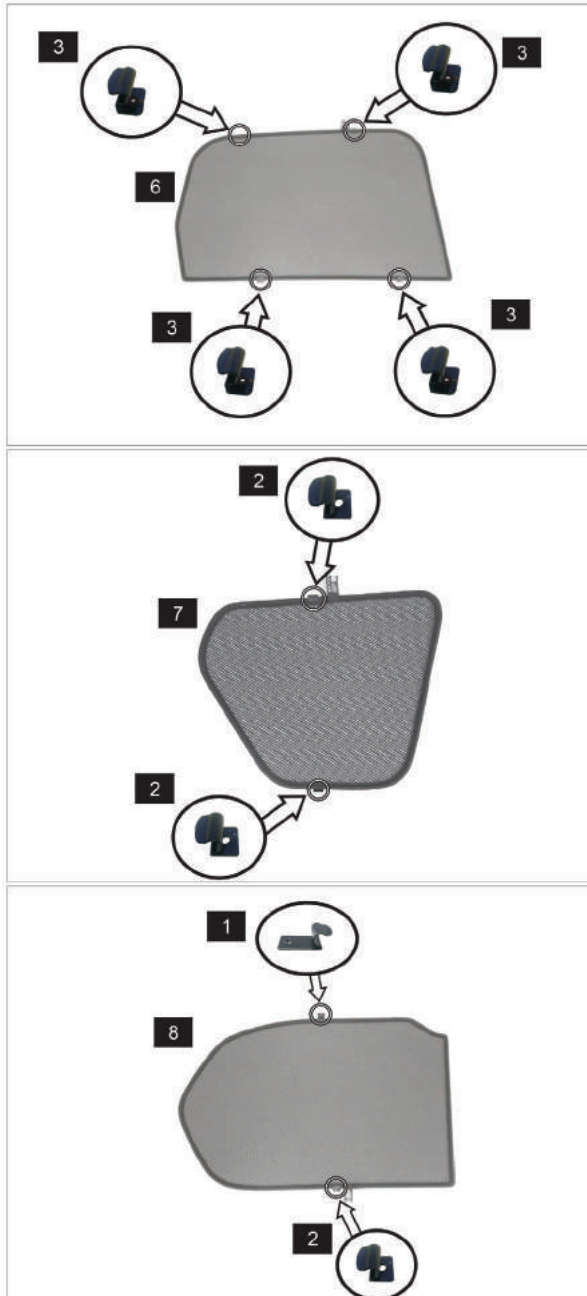

Installation

MITSUBISHI OUTLANDER 5DR

MIT-OUTL-5-A

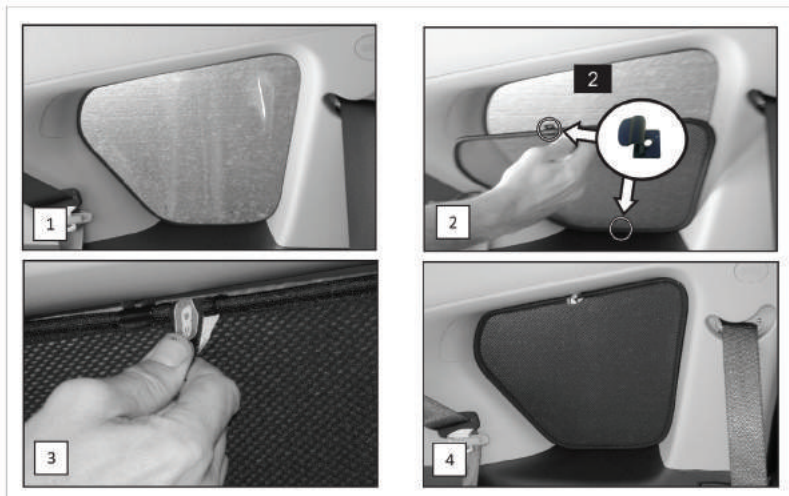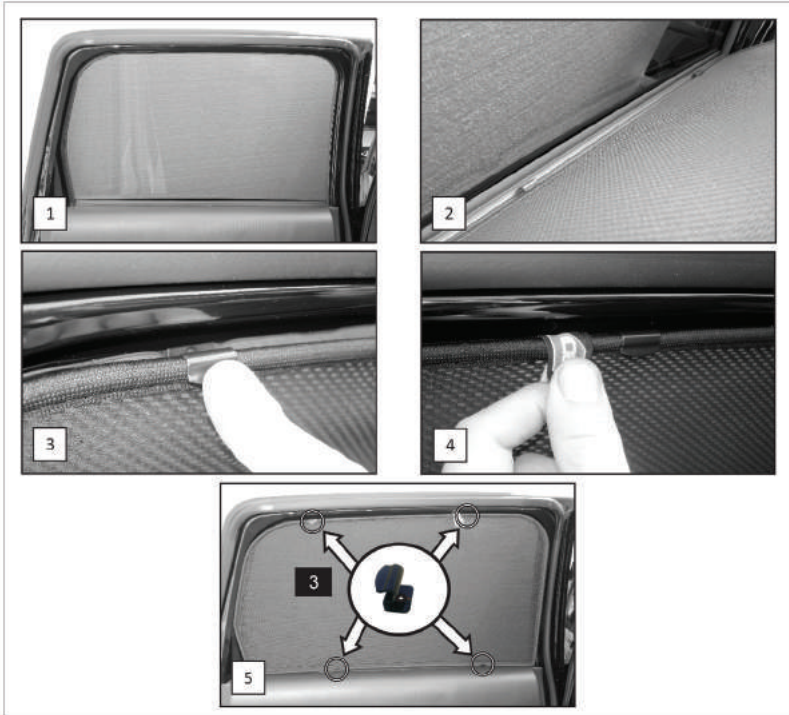

Installation

MITSUBISHI OUTLANDER 5DR

MIT-OUTL-5-A

