

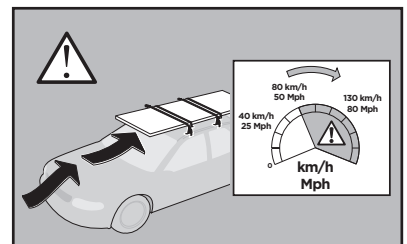
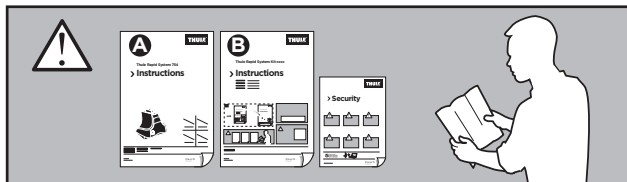


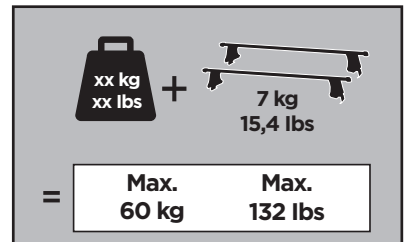

Thule Rapid System Kit 1851

> Instructions

PORSCHE Panamera, 5-dr Hatchback, 17-

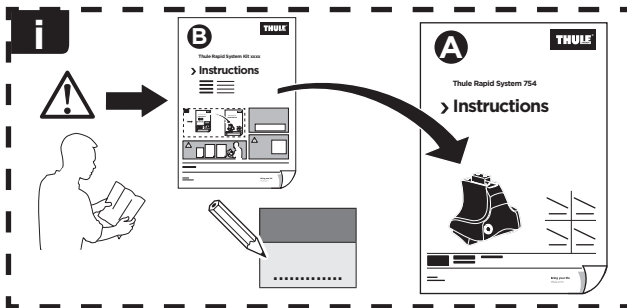


ISO 11154-E

141851
C.20170201
519-1851-01


Bring your life
thule.com



- 138 x2 ▶
- 191 x1 ▶
- 192 x1 ▶



- ◀ 1407 x1
- ◀ 1408 x1
- ◀ 1411 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
Porsche Panamera, 5-dr Hatchback, 17-	43,5	1086	42 ³ / ₄

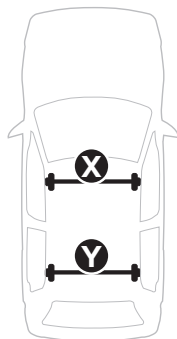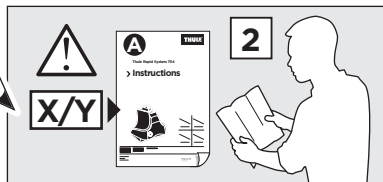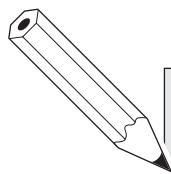


	Y (scale)	Y (mm)	Y (inch)
Porsche Panamera, 5-dr Hatchback, 17-	35	1001	39 ³ / ₈

2

Porsche Panamera, 5-dr Hatchback, 17-

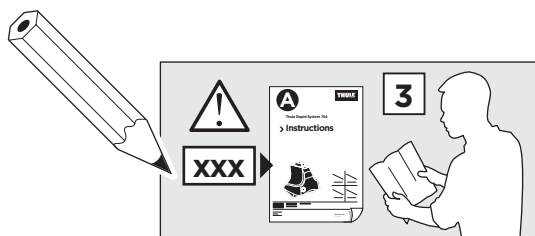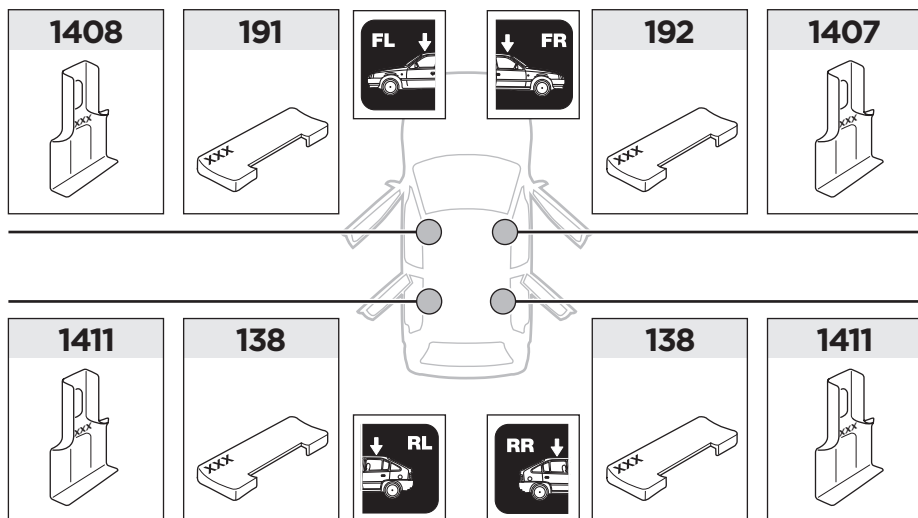

3

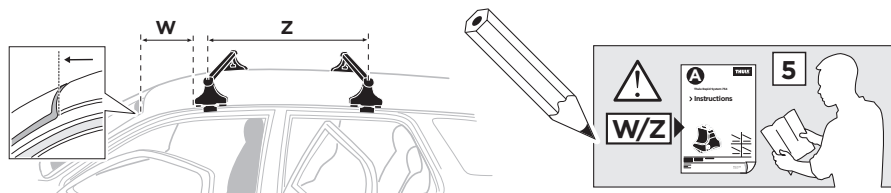

	W (mm)	Z (mm)	W (inch)	Z (inch)
Porsche Panamera, 5-dr Hatchback, 17-	185	755	7 1/4	29 3/4

