
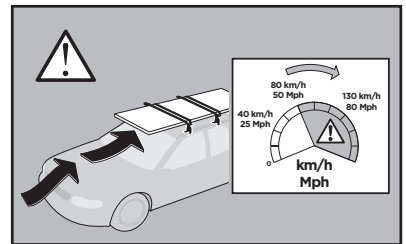
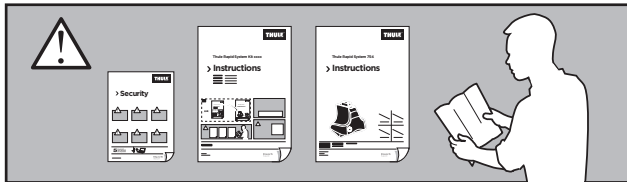
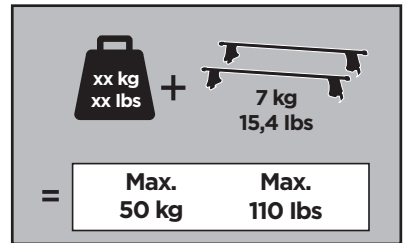


Thule Rapid System Kit 1291

> Instructions

KIA Carens, 5-dr MPV, 02-06



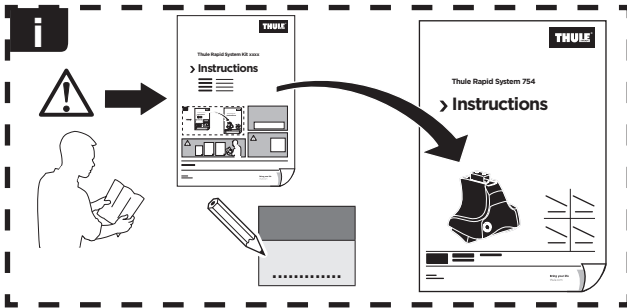


ISO 11154-E


141291

C.20130107
519-1291-01

Bring your life
thule.com

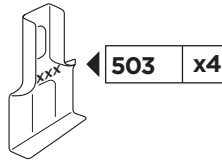



x1

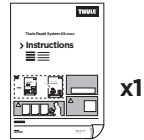

x1

1



	X (scale)	X (mm)	X (inch)
KIA Carens, 5-dr MPV, 02-06	28,5	936	36 7/8

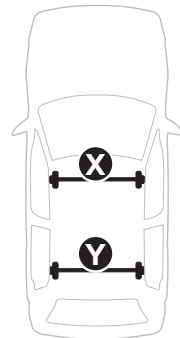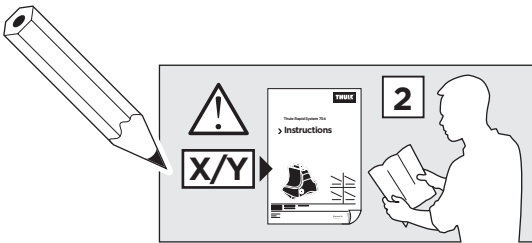


	Y (scale)	Y (mm)	Y (inch)
KIA Carens, 5-dr MPV, 02-06	27,5	926	36 1/2

2

KIA Carens, 5-dr MPV, 02-06

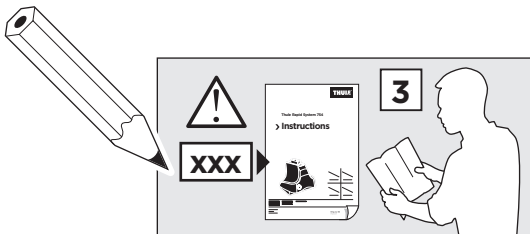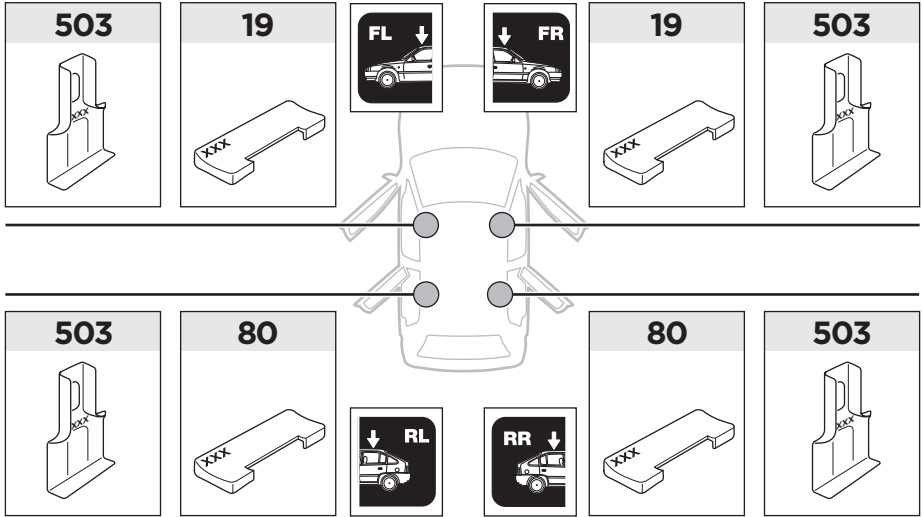

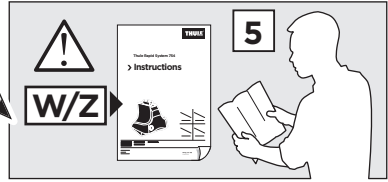3

	W (mm)	Z (mm)	W (inch)	Z (inch)
KIA Carens, 5-dr MPV, 02-06	390	700	15 ³/₈	27 ¹/₂

